



 
# **Flex 22"**

## **Counter Stand**


### **Easy Install Guide**

## Getting Started


Choose your preferred display orientation and mounting method, and follow the instructions on the following pages.

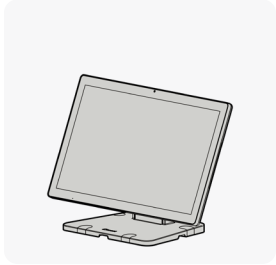


Landscape

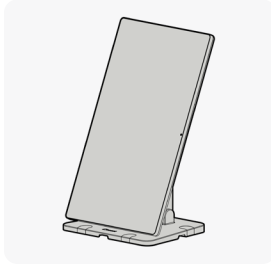

Portrait

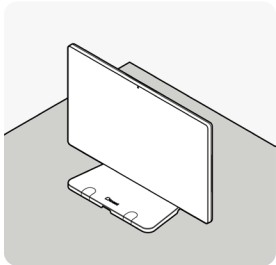


Counter Mounting

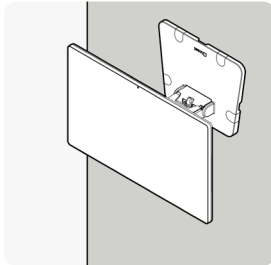

Wall Mounting

## What's in the box

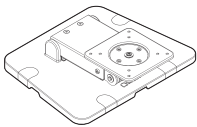


1x Counter Stand

### Installation Essentials



1x Small Allen Wrench

## Counter Stand Parts

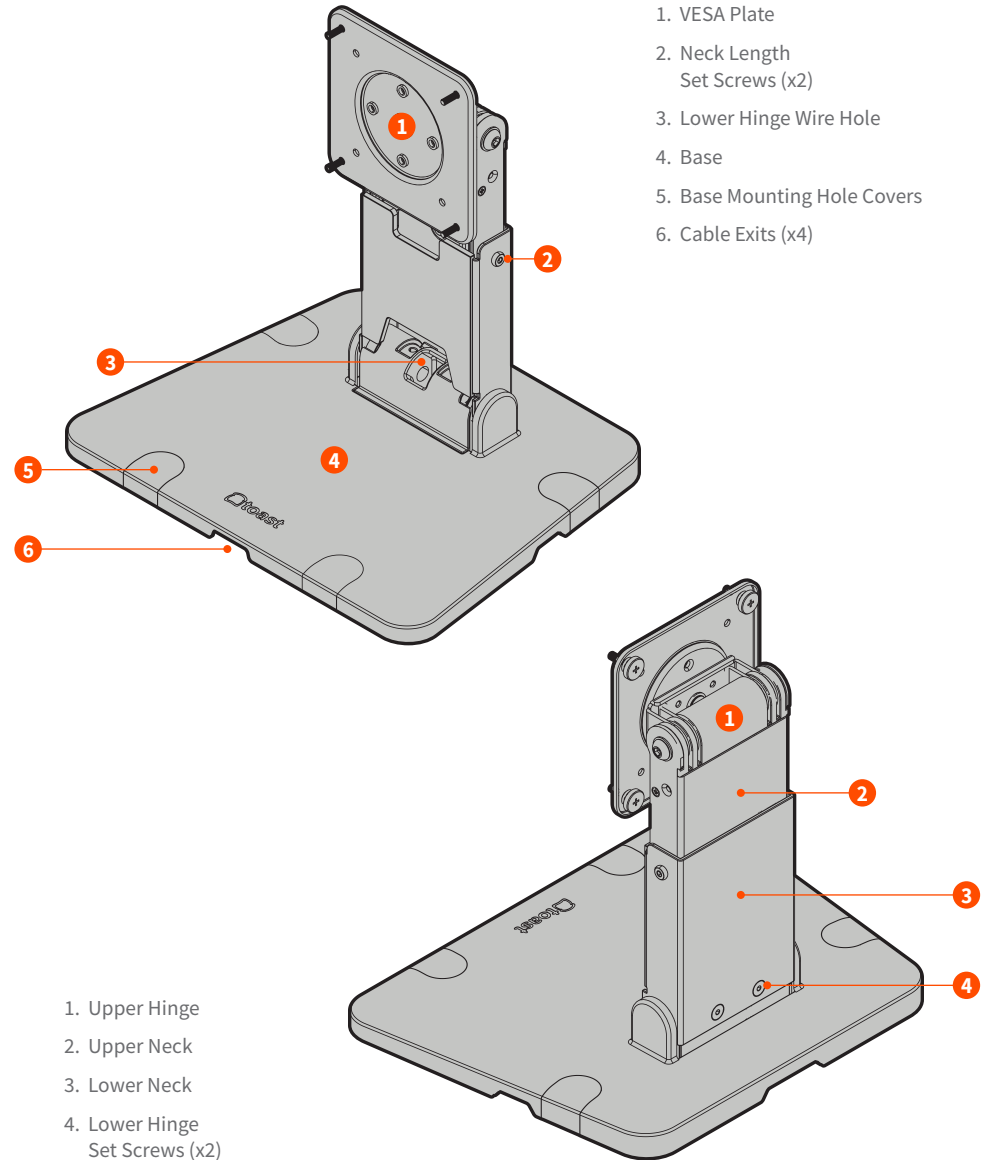


## Step 1 Position

 **Pro tip:** Clear your install area of any obstructions before you get started.


### Tools Needed



Small Allen Wrench

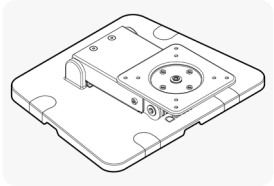


This is how the product will be positioned when it comes out of the box.

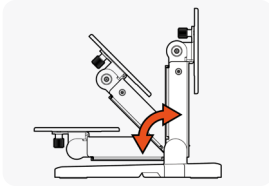


The bottom hinge has 3 positions: Flat, Mid & Vertical.


### Set the position

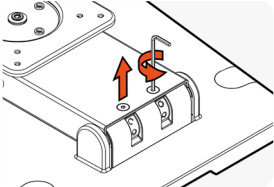

Unscrew the two Allen screws found on the face of the neck using the provided Allen key.

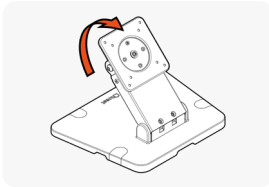


Adjust the neck lower hinge till the holes line.

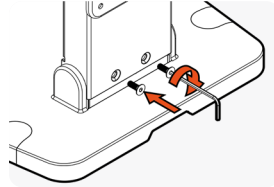


Screw again the two Allen screws on the face of the neck.

→ If you plan to set Flex 22" in portrait proceed to [Extend the Neck](#) (page 8).


## Step 2A Landscape

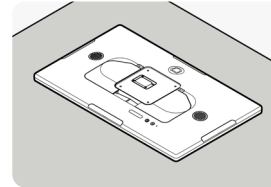


Place the Flex 22" face down on a clean surface.

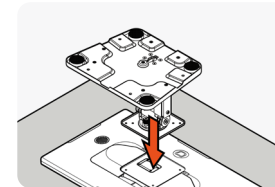

Position the stand VESA plate against the back of the Flex 22".

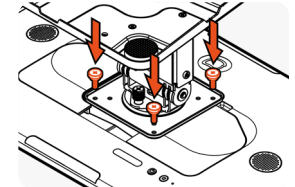


Using the 4 thumb screws that come with the Flex 22", screw in the VESA plate to the back of the Flex 22".

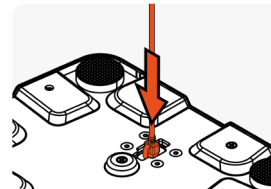

The power and Ethernet cable can now be run through the neck starting through the hole in the bottom of the stand.


## Step 2A Landscape

Connect to power and Ethernet according to the labels on the back of your Toast Flex 22" terminal.

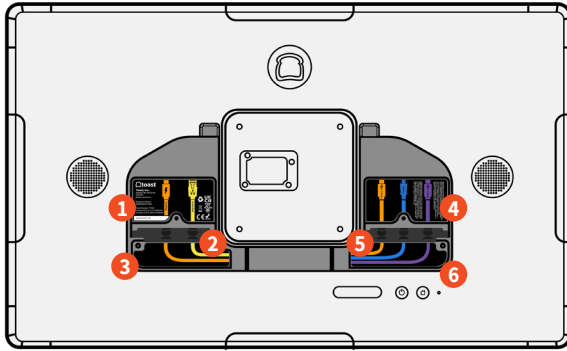


1. Power & Ethernet cables
2. Grommet to seal the pocket
3. Pocket for cable management
4. Accessory pocket
5. Grommet to seal the pocket
6. Pocket for cable management


**Remove back panels.** Open and remove the back panel from the top cut outs to expose the back pockets.

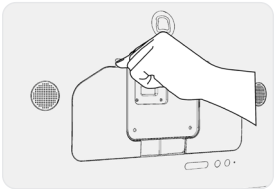


**Plug in your cables.** Plug in the USB-C power and the (optional) Ethernet cable in the left pocket as shown.

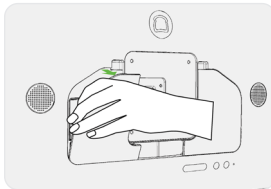

## Step 2A Landscape

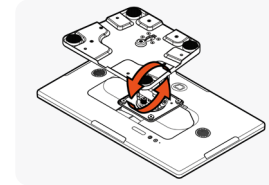

Flip the stand onto its base.

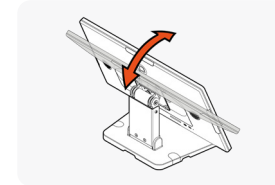

Adjust the screen to your preference.


## Step 2B Portrait

### Tools Needed




Small Allen  
Wrench


### Extend the Neck

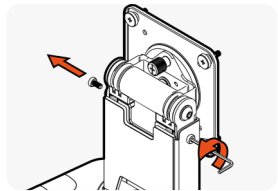

Using the Allen tool provided unscrew the two neck length adjustment screws on either side of the top of the neck.

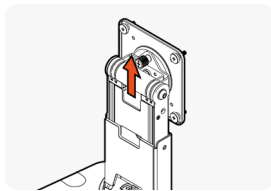


Pull the neck out until the second set of holes align. Be careful not to pull it completely out.

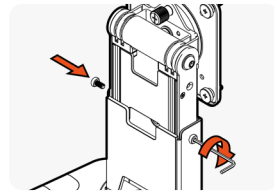


Screw again the two Allen screws on the face of the neck.


## Step 2B Portrait

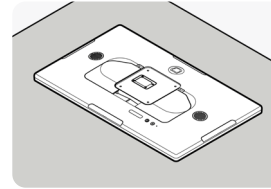


Place the Flex 22" face down on a clean surface.

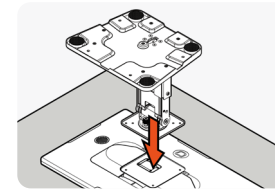

Position the stand VESA plate against the back of the Flex 22".

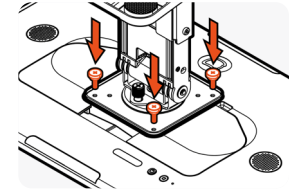


Using the 4 thumb screws that come with the Flex 22", screw in the VESA plate to the back of the Flex 22".

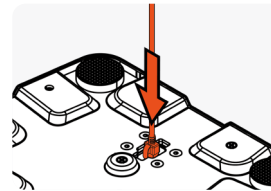

The power and Ethernet cable can now be run through the neck starting through the hole in the bottom of the stand.


## Step 2B Portrait

Connect to power and Ethernet according to the labels on the back of your Toast Flex 22" terminal.

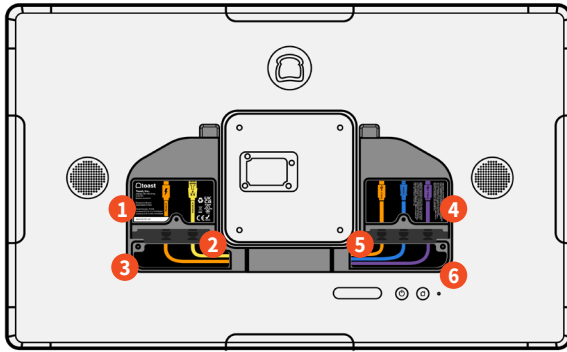


1. Power & Ethernet cables
2. Grommet to seal the pocket
3. Pocket for cable management
4. Accessory pocket
5. Grommet to seal the pocket
6. Pocket for cable management


**Remove back panels.** Open and remove the back panel from the top cut outs to expose the back pockets.

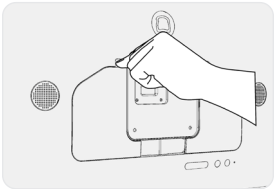


**Plug in your cables.** Plug in the USB-C power and the (optional) Ethernet cable in the left pocket as shown.

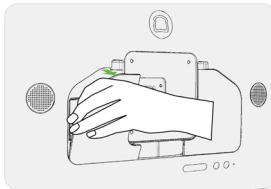


## Step 2B Portrait

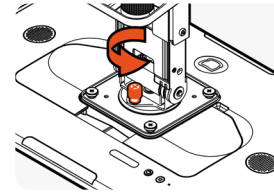


Unscrew the spring rotation thumb screw on the back of the VESA plate.

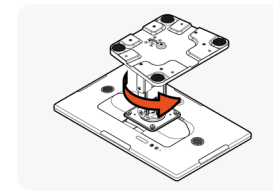


Rotate the stand from landscape to portrait.

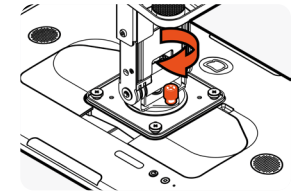

When aligned with the hole, push the thumb screw in and tighten till the Flex 22" is locked in place.

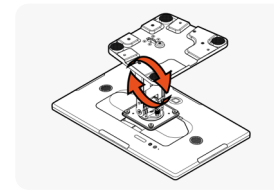

Flip the stand onto its base.

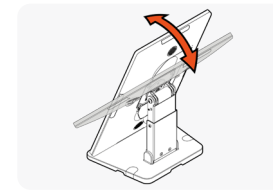


Adjust the screen to your preference.


## Step 3 Surface Mounting

 User is responsible for using proper sized mounting screws and mounting to appropriate structural support if wall mounting.

### Choose your Mounting Method

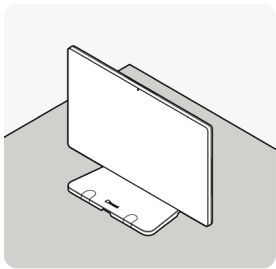


Counter Mounting

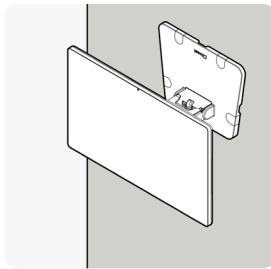


Wall Mounting


## Step 3 Surface Mounting

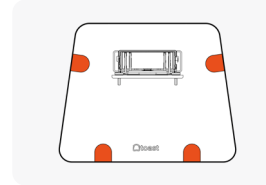


Locate the four covers on the stand base.

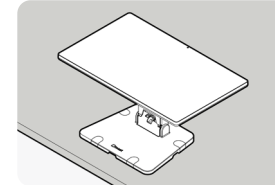


Position the stand onto the surface.

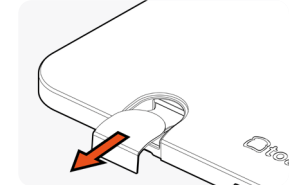

Pull the covers. Be careful, covers do not come completely off of the base.

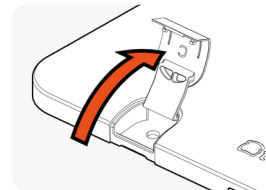

Lift the covers to expose the mounting holes and mark holes.

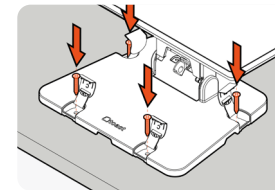

Screw stand to surface (use provided screws). Then, reinstall covers.

---

### Important Safety Instructions

**Caution:** Risk of Injury and/or property damage

**Weight capacity:** Up to 10 pounds.

Read these instructions carefully. If you are passing this product to a third party, you must include these instructions.

When using the product, please follow basic safety precautions, including the following:

- This product is intended for up to 10 pounds (4.5 kg) of weight. If your device weighs more, this wall mount is NOT compatible.
- Do not exceed the maximum weight indicated. This wall mount is intended for use only with the maximum weight indicated. Use with products heavier than the maximum weights indicated may result in collapse of the wall mount and the attached terminal, causing possible injury and/or property damage.
- Before mounting, determine a suitable mounting location. We strongly recommend installing on stud walls. We do not recommend installing on drywall, wall boards, or thin plywood. If chosen to mount to drywall, ensure there is 1/2in wall thickness at minimum.
- Do not modify the structure of this product in any way. It is the responsibility and liability of the installer to ensure the suitability of the supporting structure.
- This product is suitable only for Toast approved products and should be installed by an experienced adult. If in doubt, consult a professional.
- Keep children and pets away while installing the product. The product contains small parts that could be a choking hazard if swallowed.
- Do not use this product if any parts are missing, damaged, or worn.
- Stop using the product at the first sign of damage or if parts become detached.

